

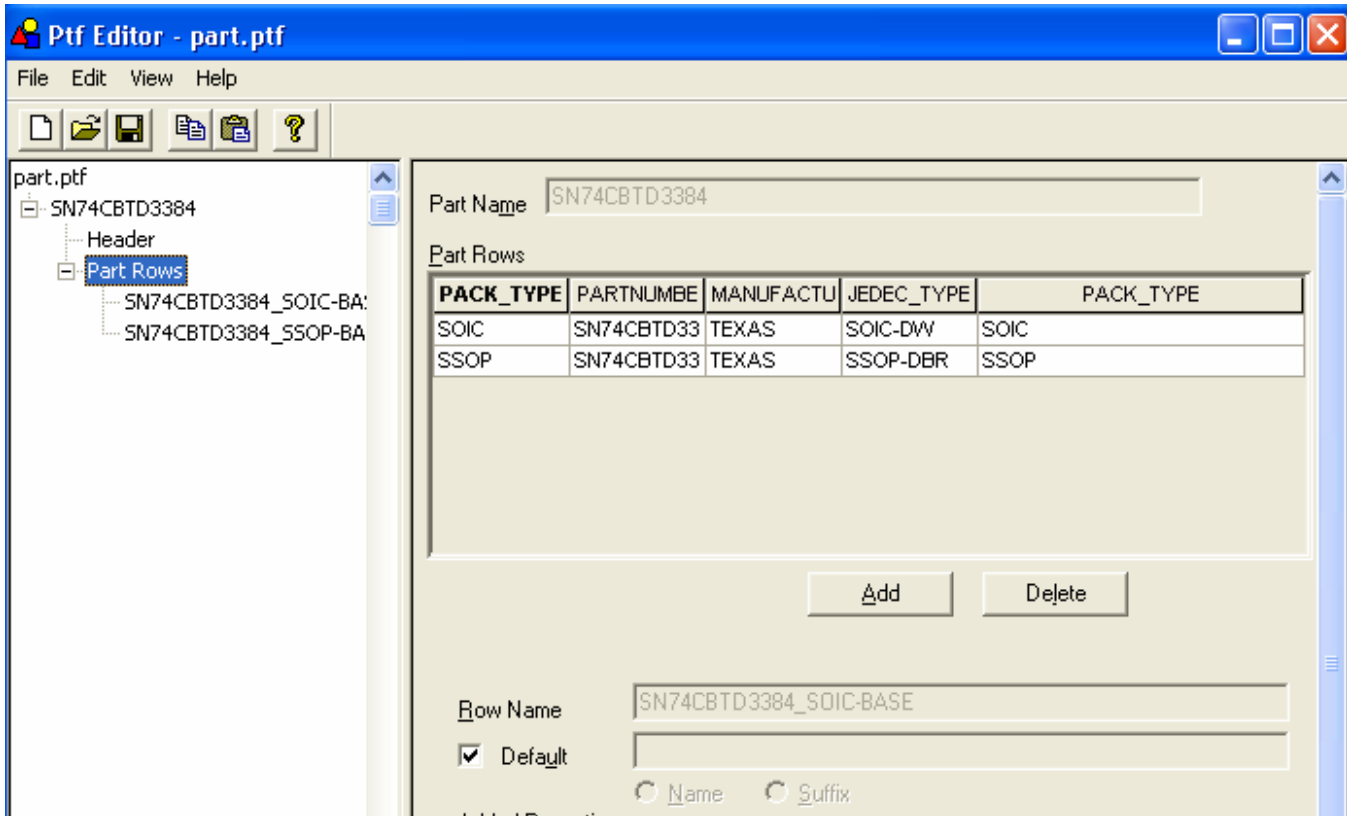
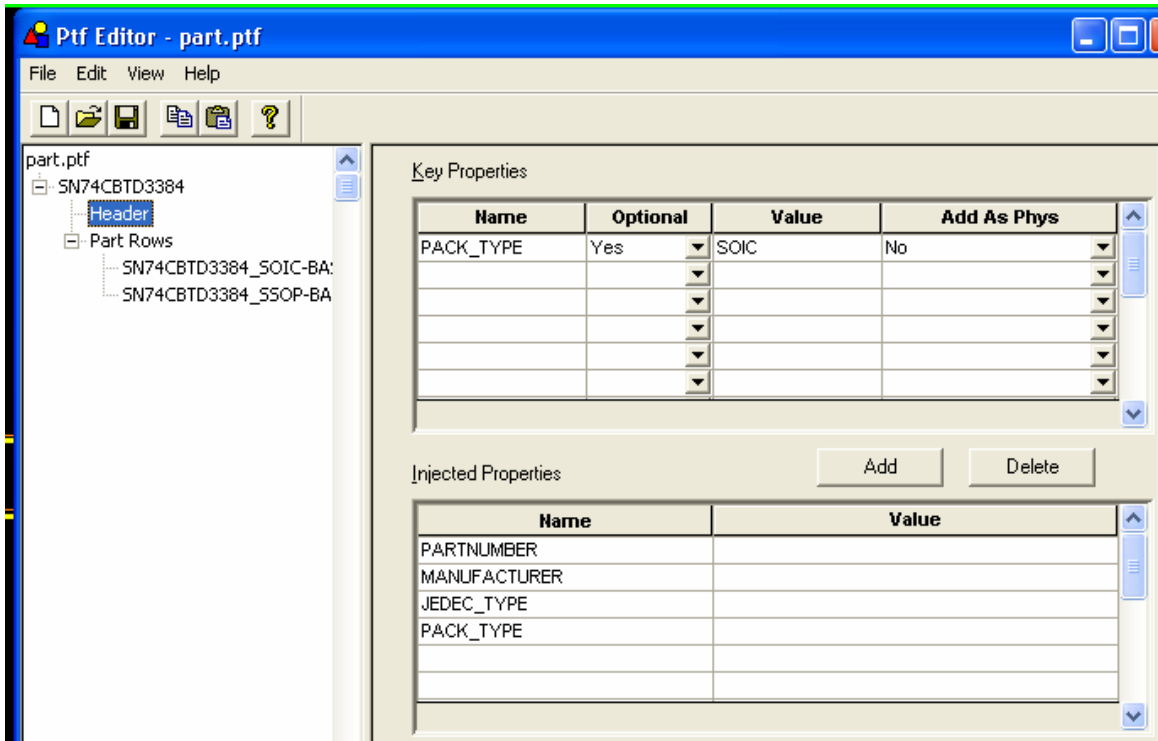


1. I have created a part table file as follows,

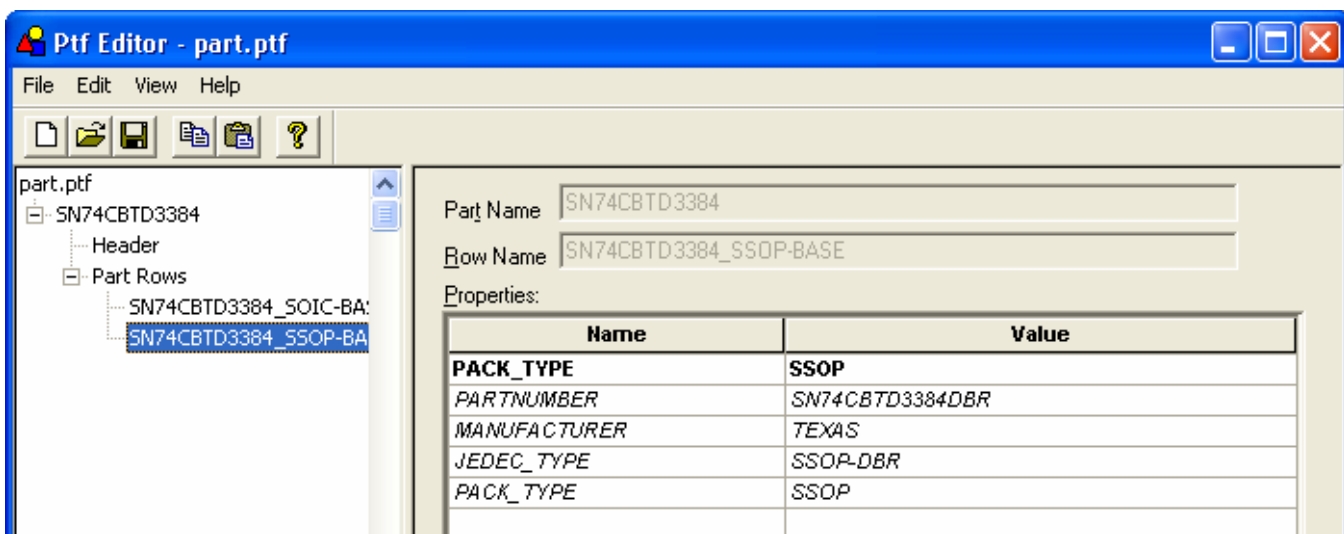

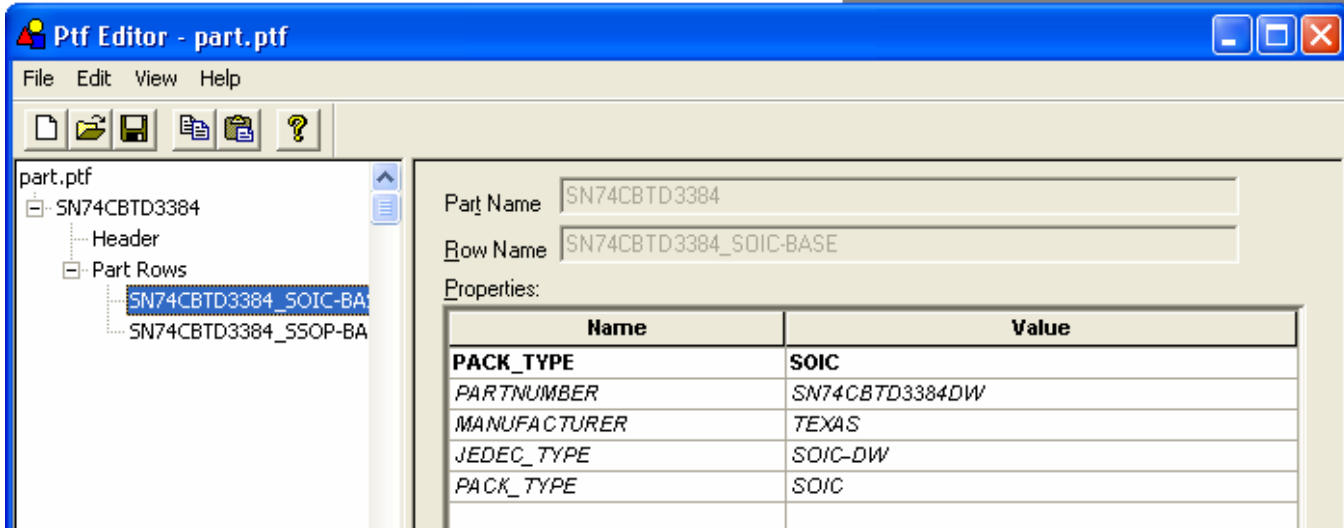

According to my ptf file,  
I used SOIC as default footprint....

I placed this component in the schematics ....

But to change its instance or properties (SOIC to SSOP), I have to use part manager....

My doubt was , without using part manager shall we have options to change the properties of a component....

Plz help to resolve my doubt

thanks  
joe