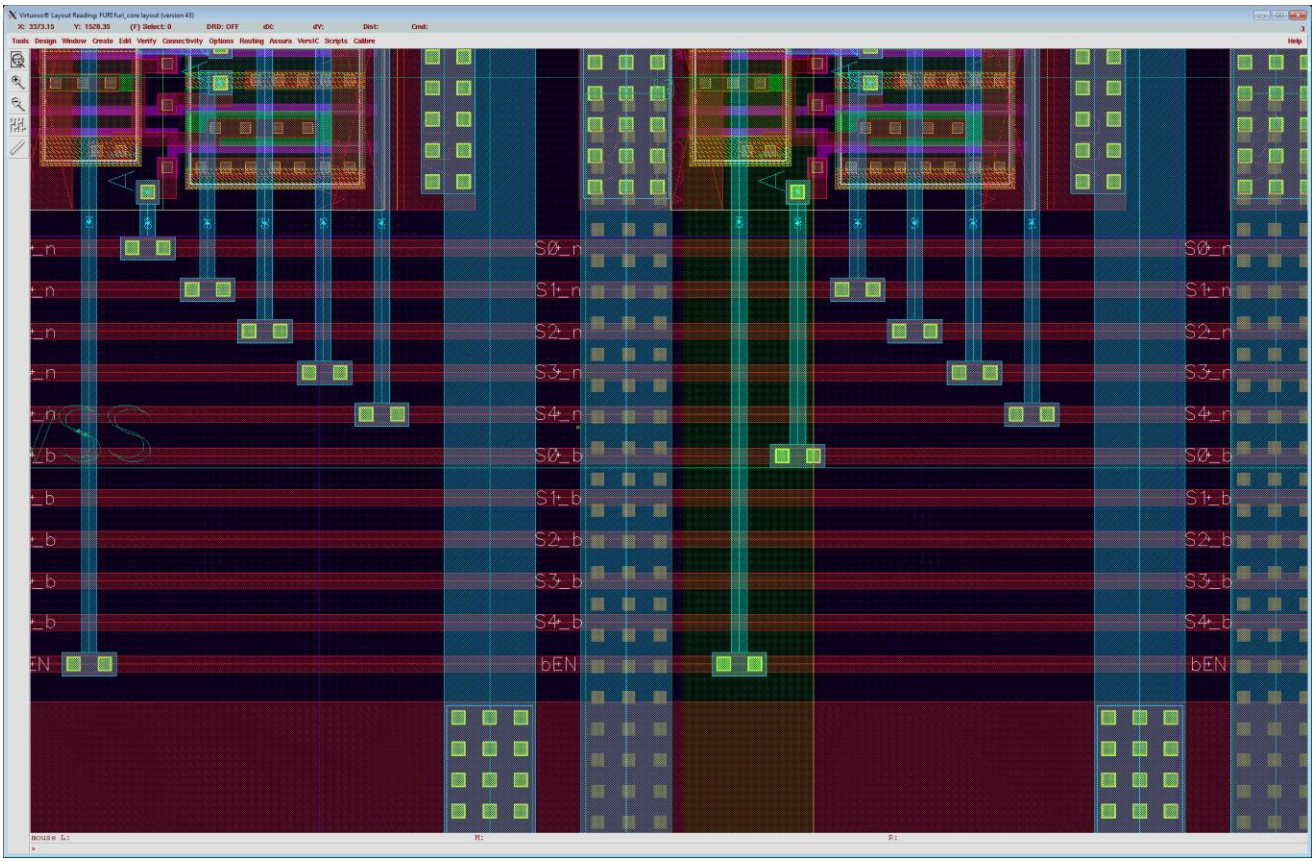
Virtuoso® Layout Reading: FURI furi_core layout (version 43)
X: 3373.15 Y: 1528.35 (F) Select: 0 DRD: OFF dX: dY: Dist: Cmd:
Tools Design Window Create Edit Verify Connectivity Options Routing Assura VersIC Scripts Calibre
Help
S0_n
S1_n
S2_n
S3_n
S4_n
S0_b
S1_b
S2_b
S3_b
S4_b
bEN
mouse L:
M:
R: